

## SPACER KIT INSTALLATION

- Step 1: Rotate Wing Knob counter-clockwise to unlock Dial.
- Step 2: Rotate Dial clockwise until it stops. (this will expose the cap screw in the T-Lift).
- Step 3: Remove the (2) 8-32 x 5/8" cap screws (one in T-Lift, one in Plate).
- Step 4: Separate the T-Lift / Plate Assembly from the Dovetail / Base Assembly.
- Step 5: Install the larger of the (2) enclosed spacers into the Dovetail, and the small spacer into the Base.
- Step 6: While slightly compressing the spring action in the Dovetail / Base Assembly, simultaneously attach the T-Lift / Plate Assembly to the spacers. Insert the spacer cap screws and tighten.

